




**SPARE PARTS LIST AND
EXPLODED ASSEMBLY
C20 C/J/H/V**

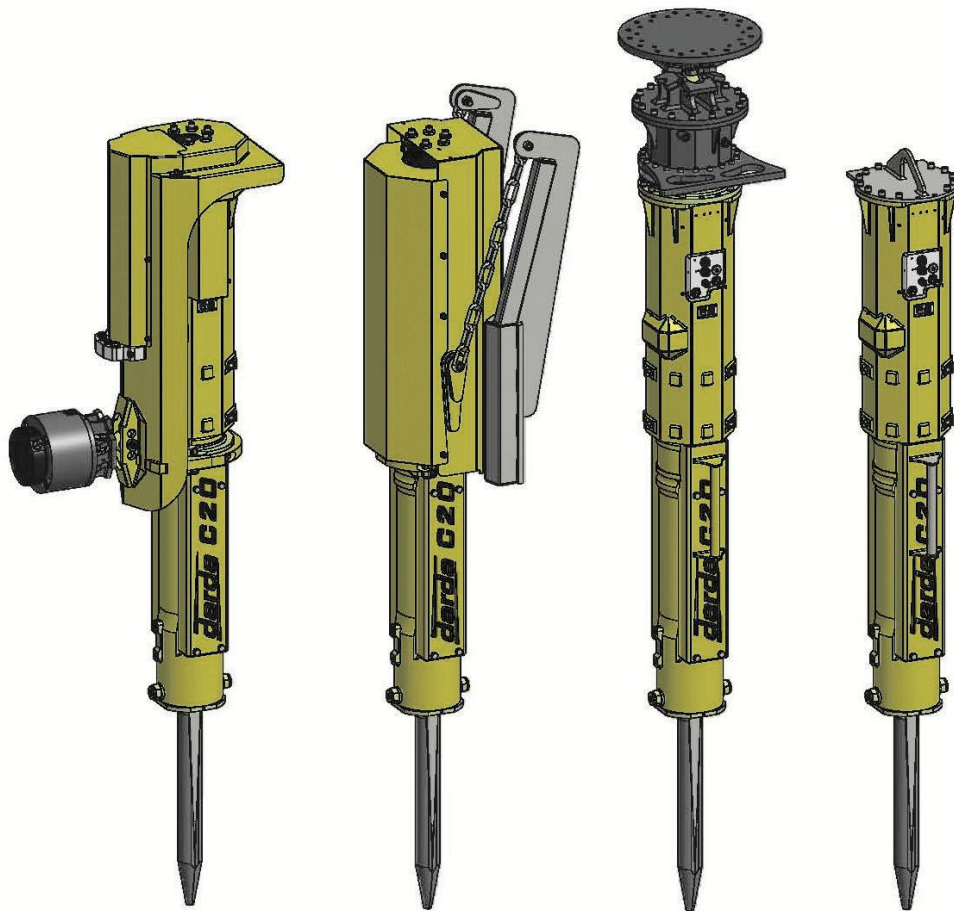

***THE SOURCE FOR HYDRAULIC
ROCK AND CONCRETE
SPLITTERS***

© by **Darda GmbH**

Darda GmbH, Blumberg, retains the copyright to this documentation. This documentation is solely intended for the operator and his personnel.

The content of this documentation (text, figures, drawings, graphics, plans, etc.) may not be copied or distributed in part or in full without our consent in writing, nor can it be used without authorization for competitive purposes or given or made accessible to third parties.

Darda GmbH

Im Tal 1

D – 78176 Blumberg

Phone: + 49 / 0 77 02 / 43 91-0

Fax: + 49 / 0 77 02 / 43 91-12

E-mail: info@darda.de Internet:
<http://www.darda.de>

Product Manual: C20 C/J/H/V Carrier Mounted Splitter

Version: 1.0 English

Release date: 06/2016

NOTICE

This Product Manual (C20 C/J/H/V Carrier Mounted Splitter) has been retranslated and improved by Elco International, Incorporated in order to facilitate a better understanding of the important information enclosed in this product manual. All original explicit instructions have been retained in the retranslation in their original meaning.

Revised Product Manual: C20 C/J/H/V Carrier Mounted Splitter

Version: 2018.02ELCO

Release Date: 01 September, 2018

Elco International, Incorporated

101 Van Riper Avenue

Elmwood Park, New Jersey 07407

www.elco.com

office@elco.com

1-800-631-3816

(201)-797-4644

We reserve the right to change the design of the device for the improvement of the product.

STOP!

The conversion and hydraulic installation of the device may only be carried out by trained personnel with a profound mechanical and hydraulic knowledge. Failure to follow this instruction may void any warranties and lead to failure of the component and/or carrier.

The owner is responsible for the training and proficiency of mechanics, operators, and other employees or entities that interact with the unit in a work capacity.




C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-1: Exploded Assembly for C20H

Page | 2

Page | 2

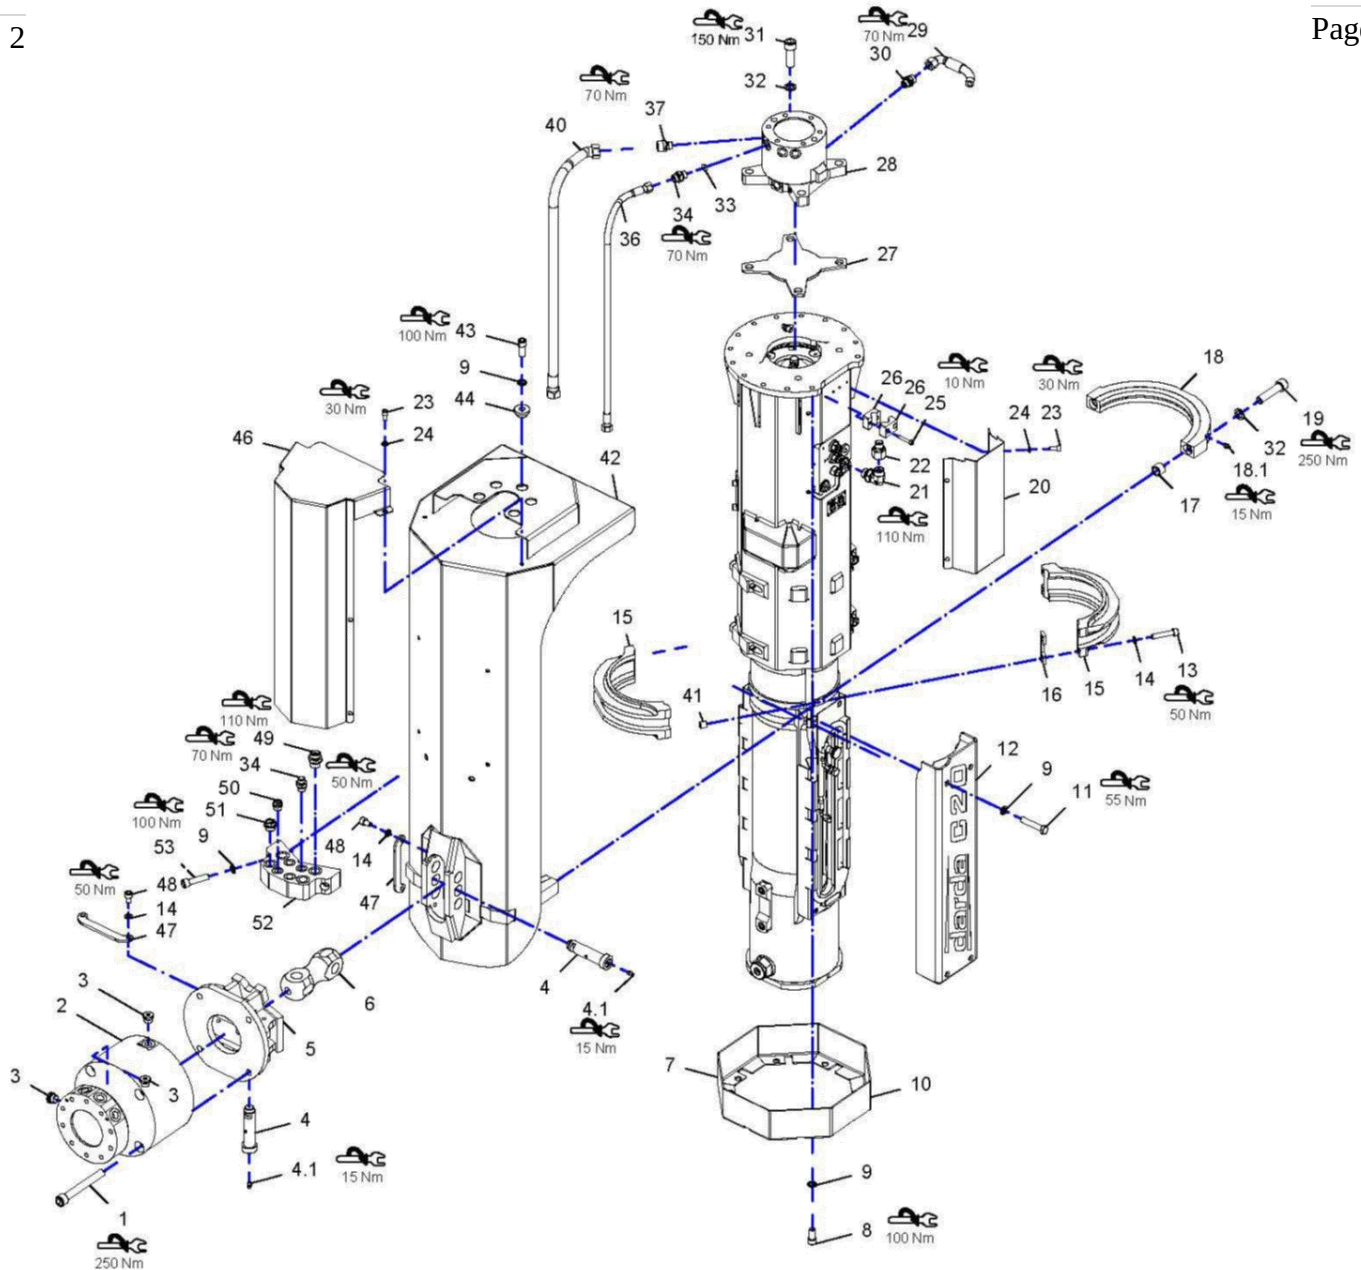

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-1

Page | 3

Ref.	Description	Part No.	Qty.	Spec.	Torque
	C20 W/O Plug & Feathers, W/O Mounting Kit	8381 0421 79	1		
1	Screw	3391 5039 00	4	M16 X 130 -8.8	185 ftlbs
2	Rotary Unit	3390 2300 00	1		
3	Screw Plug	3391 5090 00	4	VSTI 18 X 1.5	
4	Bolt, Complete	3390 2204 00	2		
4.1	Grease Nipple	6100 0123 00	1	M8 X 1	11 ftlbs
5	Mounting Plate	3390 2202 00	1		
6	Link	3390 2203 00	1		
7	Plate	3390 2213 00	1		
8	Screw	3390 0620 00	7	M12 X 25 -8.8	74 ftlbs
9	Washer	6320 0304 00	22	Nordlock M12	
10	Plate	3390 2214 00	1		
11	Screw	3391 5091 00	8	M12 X 60 -8.8	41 ftlbs
12	Cover, Complete	3390 2201 00	2		
13	Screw	3390 0170 00	4	M10 X 50 -8.8	37 ftlbs
14	Washer	3390 0568 10	4	Nordlock M10	
15	Bearing Disc	3390 2208 00	2		
16	Seal	3390 2209 00	2		
17	Bushing	3390 2216 00	2		
18	Half Disc, Complete	3390 2206 00	1		
18.1	Grease Nipple	6100 0123 00	2	M8 X 1	11 ftlbs
19	Screw	6500 0778 00	2	M16 X 70 -8.8	184 ftlbs
20	Cover	3390 2212 00	1		
21	Fitting	6420 0734 00	2	WEE15LROMDCF	81 ftlbs
22	Coupling	3391 5092 00	2	RED15-12LOMD	
23	Screw	6560 0125 00	10	M8 X 16 -8.8	22 ftlbs
24	Washer	3390 0676 00	10	Nordlock M8	
25	Screw	3391 5093 00	4	M6 X 35 -8.8	7 ftlbs
26	Pipe Bracket	3391 5094 00	4		
27	Spacer	3390 2211 00	1		
28	Rotary Unit	6500 0768 00	1		
29	Hose	3391 5095 00	2		
30	Coupling	3391 5096 00	2	GE12LR	52 ftlbs
31	Screw	6560 0303 00	4	M16 X 50 -8.8	185 ftlbs
32	Washer	6560 0253 00	6	Nordlock M16	


Page | 3

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-1: Exploded Assembly for C20H

Page | 4

Page | 4

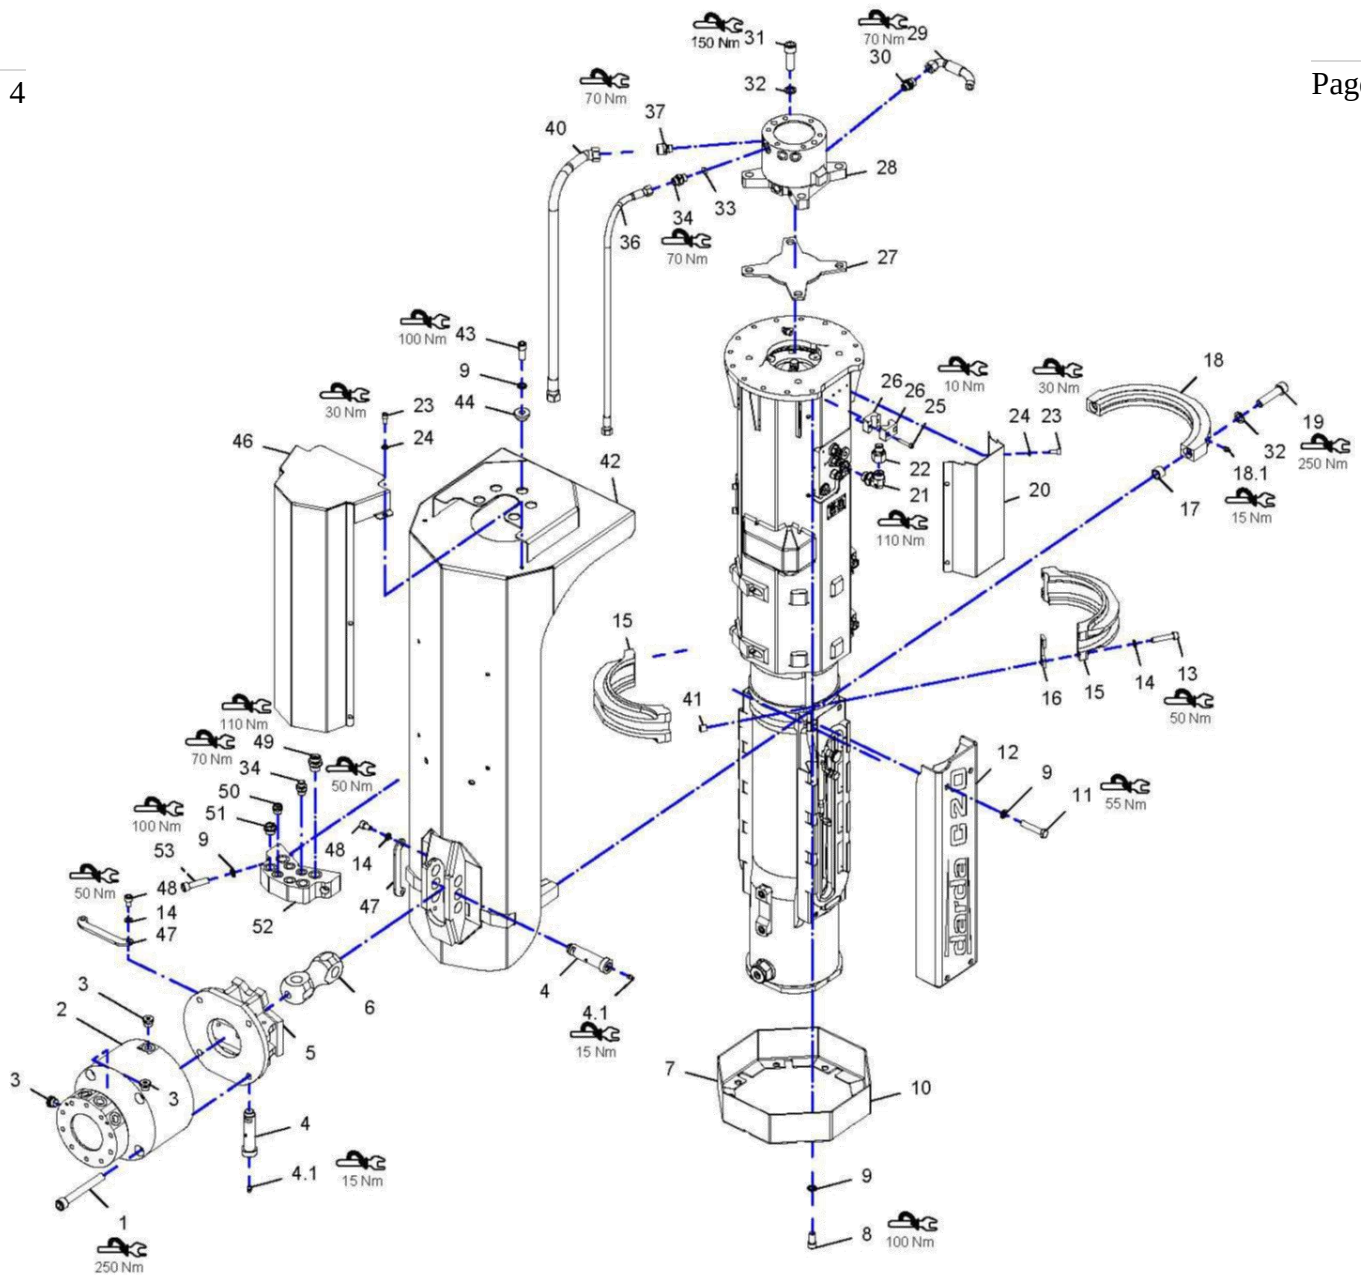

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-1

Page | 5

Page | 5


Ref.	Description	Part No.	Qty.	Spec.	Torque
33	Restrictor	3390 2215 00	2		
34	Coupling	6100 0100 30	4	GE10LR3/8EDOMD	52 ftlbs
36	Hose	3391 5097 00	1		
37	Coupling	3391 5098 00	2	GE15LR3/8CFX	
40	Hose	3391 5099 00	1		
41	Adapter Sleeve	6420 0209 00	2		
42	Mounting Bracket	3390 2205 00	1		
43	Screw	3391 2010 00	5	M12 X 30 -8.8	74 ftlbs
44	Sleeve	3390 2207 00	5		
46	Cover	3390 2210 00	1		
47	Locking Plate	3390 2217 00	2		
48	Screw	3391 5004 00	4	M10 X 16 -8.8	37 ftlbs
49	Coupling	6420 0128 00	2	GE15LREDA3CX	81 ftlbs
50	Screw Plug	6560 0338 00	2	G 3/8"	
51	Screw Plug	6560 0337 00	2	G 1/2"	
52	Connection Block	3390 2200 00	1		
53	Screw	3391 5012 00	2	M12 X 50 -8.8	74 ftlbs

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-2: Exploded Assembly for C20V

Page | 6

Page | 6

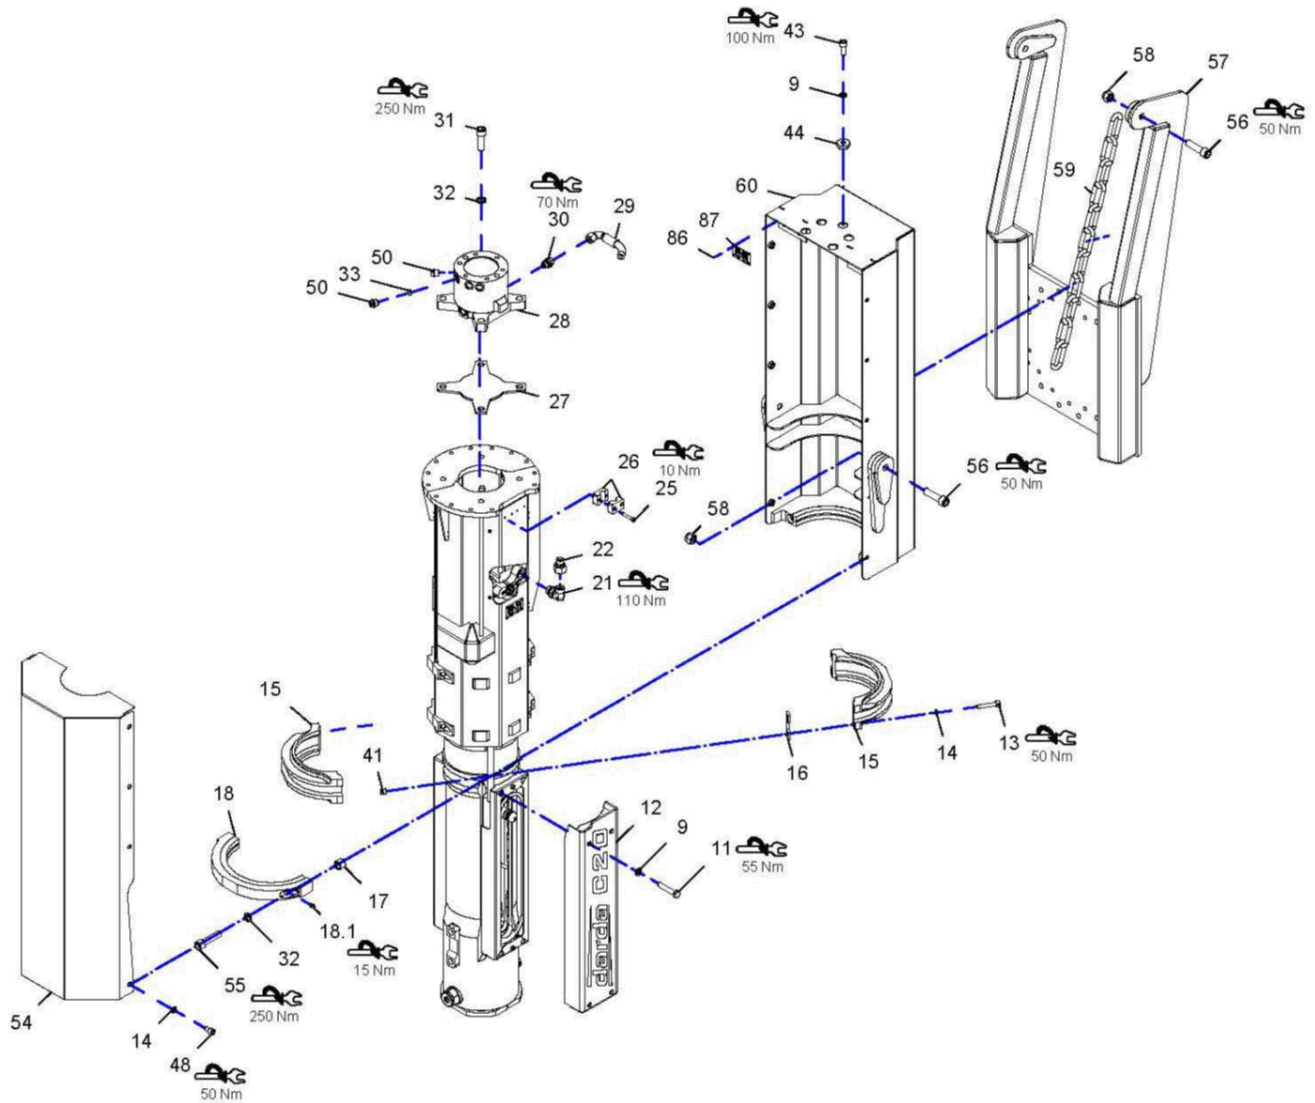

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-2

Page | 7

Ref.	Description	Part No.	Qty.	Spec.	Torque
	C20 W/O Plug & Feathers, W/O Mounting Kit	8381 0422 79	1		
9	Washer	6320 0304 00	13	Nordlock M12	
11	Screw	3391 5091 00	8	M12 X 60 -8.8	41 ftlbs
12	Cover, Complete	3390 2201 00	2		
13	Screw	3390 0170 00	4	M10 X 50 -8.8	37 ftlbs
14	Washer	3390 0568 10	12	Nordlock M10	
15	Bearing Shell	3390 2208 00	2		
16	Sealing	3390 2209 00	2		
17	Adapter Sleeve	3390 2216 00	2		
18	Half Shell, Complete	3390 2206 00	1		
18.1	Grease Nipple	6100 0123 00	2	M8 X 1	11 ftlbs
21	Fitting	6420 0734 00	2	WEE15LROMDCF	81 ftlbs
22	Coupling	3391 5092 00	2	RED15-12LOMD	
25	Screw	3391 5093 00	4	M6 X 35 -8.8	7 ftlbs
26	Pipe Bracket	3391 5094 00	4		
27	Distance Plate	3390 2211 00	1		
28	Rotary Unit	6500 0768 00	1		
29	Hose	3391 5095 00	2		
30	Coupling	3391 5096 00	2	GE12LR	52 ftlbs
31	Screw	6560 0303 00	4	M16 X 50 -8.8	185 ftlbs
32	Washer	6560 0253 00	6	Nordlock M16	
33	Restrictor	3390 2215 00	2		
41	Adapter Sleeve	6420 0209 00	2		
43	Screw	3391 2010 00	5	M12 X 30 -8.8	74 ftlbs
44	Sleeve	3390 2207 00	5		
48	Screw	3391 5004 00	8	M10 X 16 -8.8	32 ftlbs
50	Screw Plug	6560 0338 00	4	G3/8"	
54	Cover, Complete	3390 2203 00	1		
55	Screw	6700 0336 00	2	M16 X 65 -8.8	185 ftlbs
56	Screw	6560 0336 00	4	M16 X 60 -8.8	110 ftlbs
57	Mounting	3390 2301 00	1		
58	Lock Nut	3136 7025 90	4	M16	
59	Chain	3390 2304 00	2		
60	Rack	3390 2302 00	1		


Page | 7

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-3: Exploded Assembly for C20J

Page | 8

Page | 8

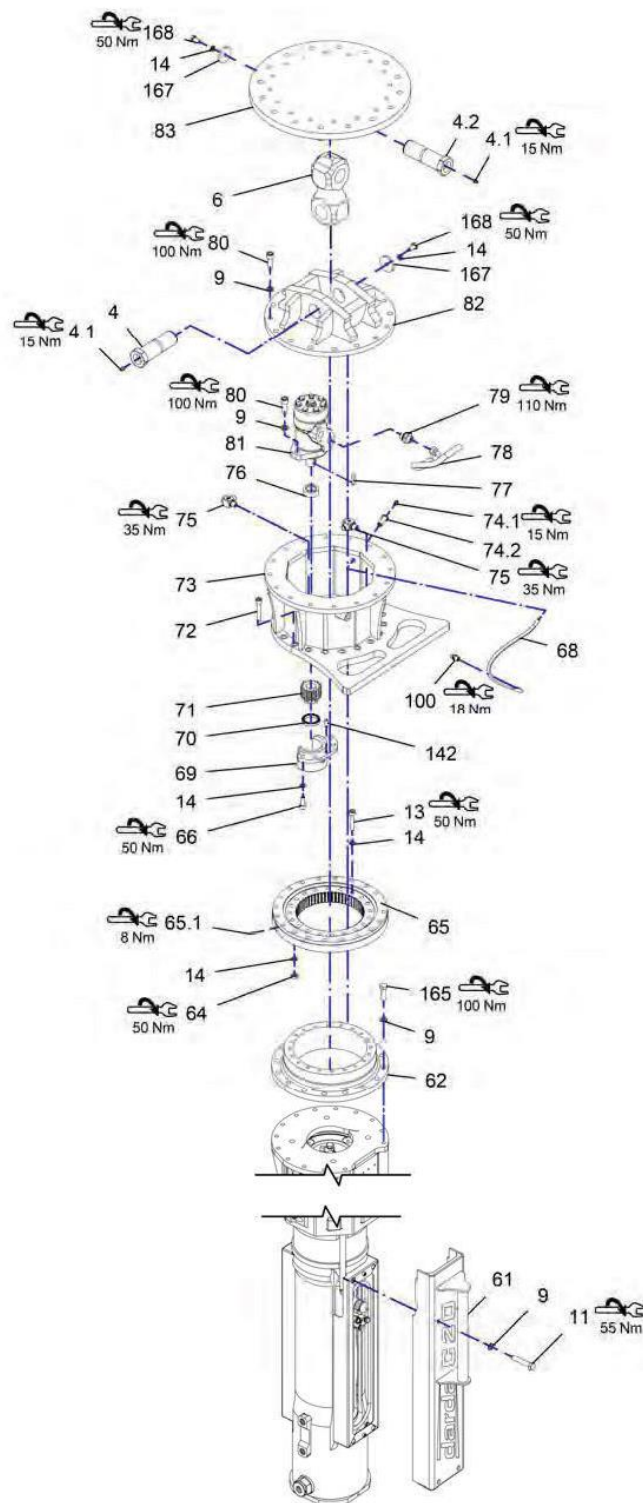

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-3


Ref.	Description	Part No.	Qty.	Spec.	Torque
	C20 W/O Plug & Feathers, W/O Mounting Kit	8381 0423 79	1		
4	Pin	3390 2204 00	2		
4.1	Grease Nipple	6100 0123 00	1	M8 X 1	11 ftlbs
4.2	Pin	20155	1		
6	Link	3390 2203 00	2		
9	Washer	6320 0304 00	40	Nordlock M12	
11	Screw	3391 5091 00	8	M12 X 60 -8.8	40 ftlbs
13	Screw	3390 0170 00	20	M10 X 50 -8.8	37 ftlbs
14	Washer	3390 0568 10	46	Nordlock M10	
61	Cover, Complete	3390 2100 00	2		
62	Spacer	3390 2500 00	1		
64	Nut	3391 0090 00	20	M10	37 ftlbs
65	Rotary Bearing	3390 2505 00	1		
65.1	Grease Nipple	0544 2106 00	2	AM 6 X 1	
66	Screw	3391 0081 00	4	M10 X 25 -8.8	37 ftlbs
68	Hose	3391 5104 00	1		
69	Pillar	3390 2502 00	1		
70	Bearing	6420 0731 00	1	74 X 35 X 7	
71	Spur Gear	3390 2504 00	1		
72	Screw	3391 0638 00	20	M10 X 60 -8.8	
73	Housing	3390 2501 00	1		
74.1	Grease Nipple	6100 0123 00	1	M8 X 1	
74.2	Coupling	6700 0705 01	1		
75	Coupling	3391 0066 80	2		26 ftlbs
76	Spacer	3390 2503 00	1		
77	Key	6420 0722 00	1	A 8 X 7 X 32	
78	Hose	3391 5117 00	2		
79	Coupling	6100 0159 00	2	GE10LR1/2A3CX	81 ftlbs
80	Screw	3391 5002 00	18	M12 X 35 -8.8	74 ftlbs
81	Hydraulic Motor	6420 0721 00	1		
82	Mounting Plate	3390 2506 00	1		
83	Mounting Plate	3390 2506 00	1		
100	Coupling	3391 5077 00	1	GE06LREDOMD	13 ftlbs
142	Pin	3390 0624 00	14	M12 X 40 -8.8	
167	Washer	3390 2068 00	2		
168	Screw	3391 5049 00	2	M10 X 20 -8.8	

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-4: Exploded Assembly for C20J

Page | 10

Page | 10

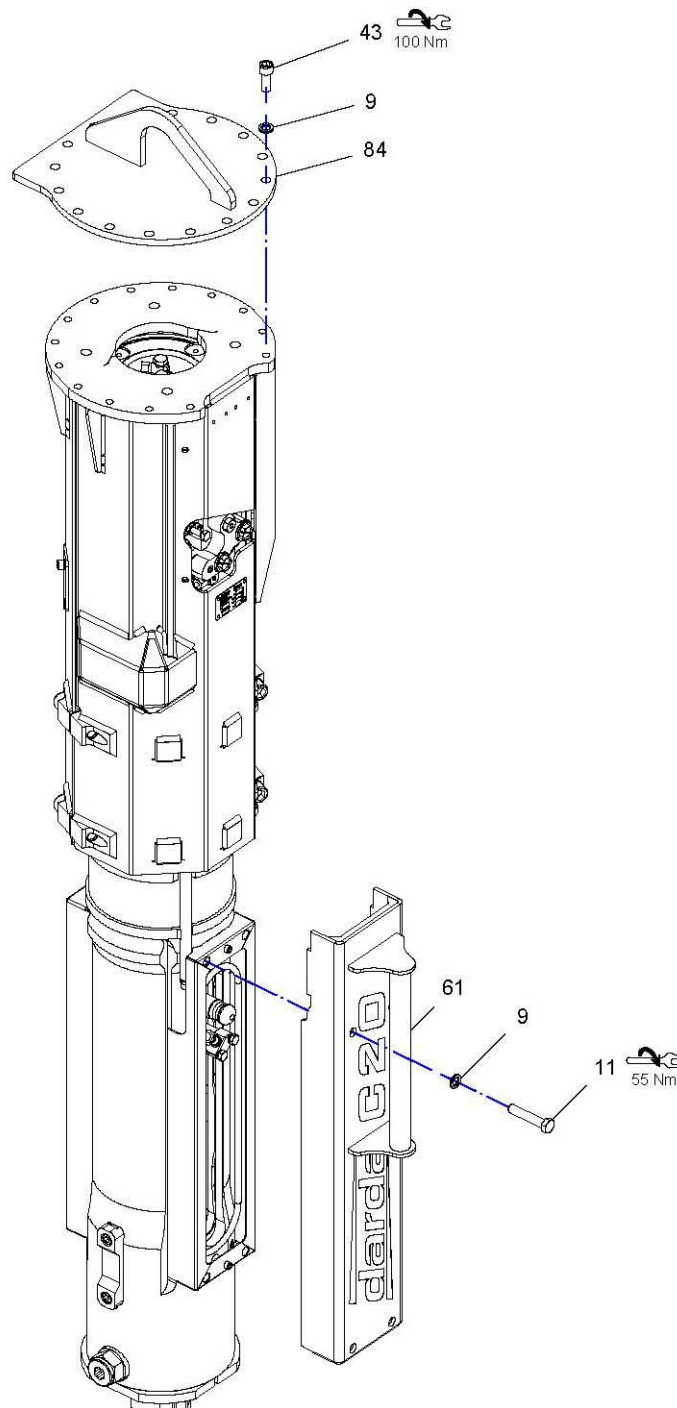

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-4

Page | 11

Page | 11


Ref.	Description	Part No.	Qty.	Spec.	Torque
	C20 W/O Plug & Feathers, W/O Mounting Kit	8381 0420 79	1		
9	Washer	6320 0304 00	22	Nordlock M12	
11	Screw	3391 5091 00	8	M12 X 60 -8.8	40 ftlbs
43	Screw	3391 2010 00	14	M12 X 30 -8.8	74 ftlbs
59	Cover, Complete	3390 2100 00	2		
84	Mounting Plate	3390 2101 00	1		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-5: Exploded Assembly Wedge Sets

Page | 12

Page | 12

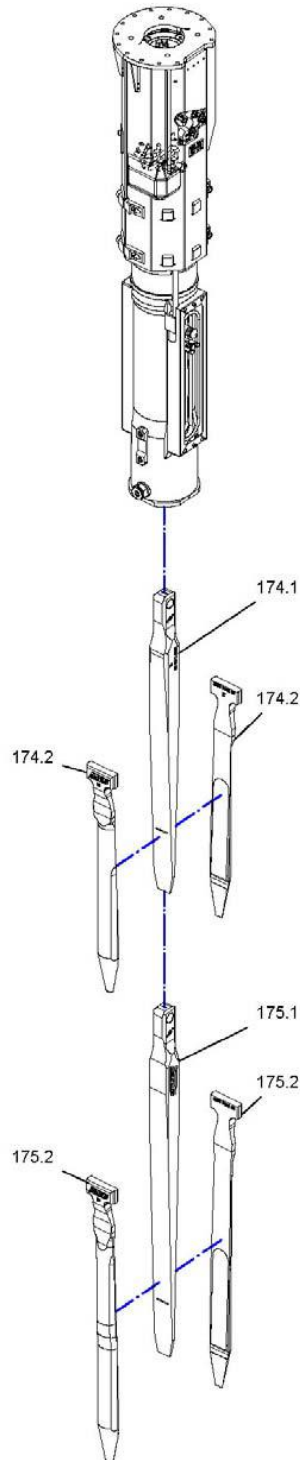

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-5


Page | 13

Page | 13

Ref.	Description	Part No.	Qty.	Spec.	Torque
174	Wedge Set C20N	3390 2404 00	1		
174.1	Plug C20N	3390 2401 00	1		
174.2	Feather C20N	3390 2400 00	2		
175	Wedge Set C20L	3390 2405 00	1		
175.1	Plug C20L	3390 2403 00	1		
175.2	Feather C20L	3390 2402 00	2		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-6: Exploded Assembly for Cylinder

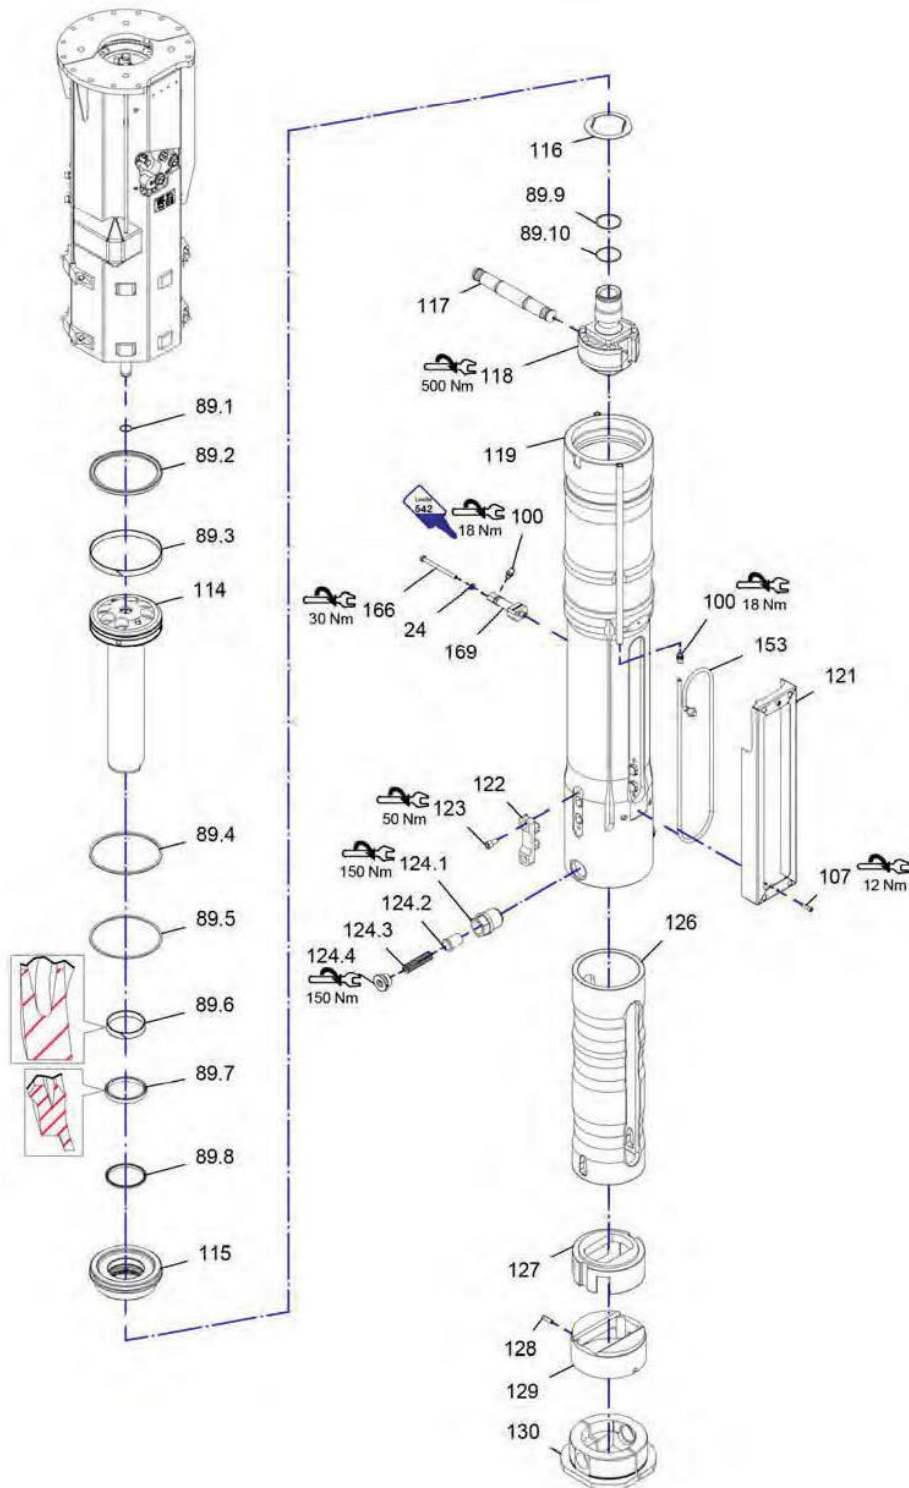

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-6


Page | 15

Page | 15

Ref.	Description	Part No.	Qty.	Spec.	Torque
24	Washer	3390 0676 00	4	Nordlock M8	
89	Seal Kit	3390 2060 80	1		
89.1	O-Ring				
89.2	Piston Seal				
89.3	Guide Ring				
89.4	O-Ring				
89.5	Support Ring				
89.6	Guide Ring				
89.7	Rod Sealing				
89.8	Wiper				
89.9	O-Ring				
89.10	Support Ring				
100	Coupling	3391 5077 00	4	GE06LREDOMD	13 ftlbs
107	Screw	3391 0277 00	4	M6 X 25 -8.8	9 ftlbs
114	Piston Rod	3390 2027 00	1		
115	Stuffing Box	3390 2028 00	1		
116	Lock Ring	6700 0129 00	1		
117	Bolt	3390 2035 00	1		
118	Plug Guide Ring	3390 2036 00	1		370 ftlbs
119	Cylinder Tube	3390 2050 00	1		
121	Grease Hose Shroud	3390 2048 00	2		
122	Locking Bracket	3390 2034 00	2		
123	Screw	3391 0082 00	4	M10 X 20 -8.8	37 ftlbs
124	Feather Retainer	3390 2062 80	2		
124.1	Bolt	3390 2039 00	1		
124.2	Sleeve	3390 2044 00	1		
124.3	Spring	3391 5106 00	1		
124.4	Cap	3390 2045 00	1		110 ftlbs

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-6: Exploded Assembly for Cylinder

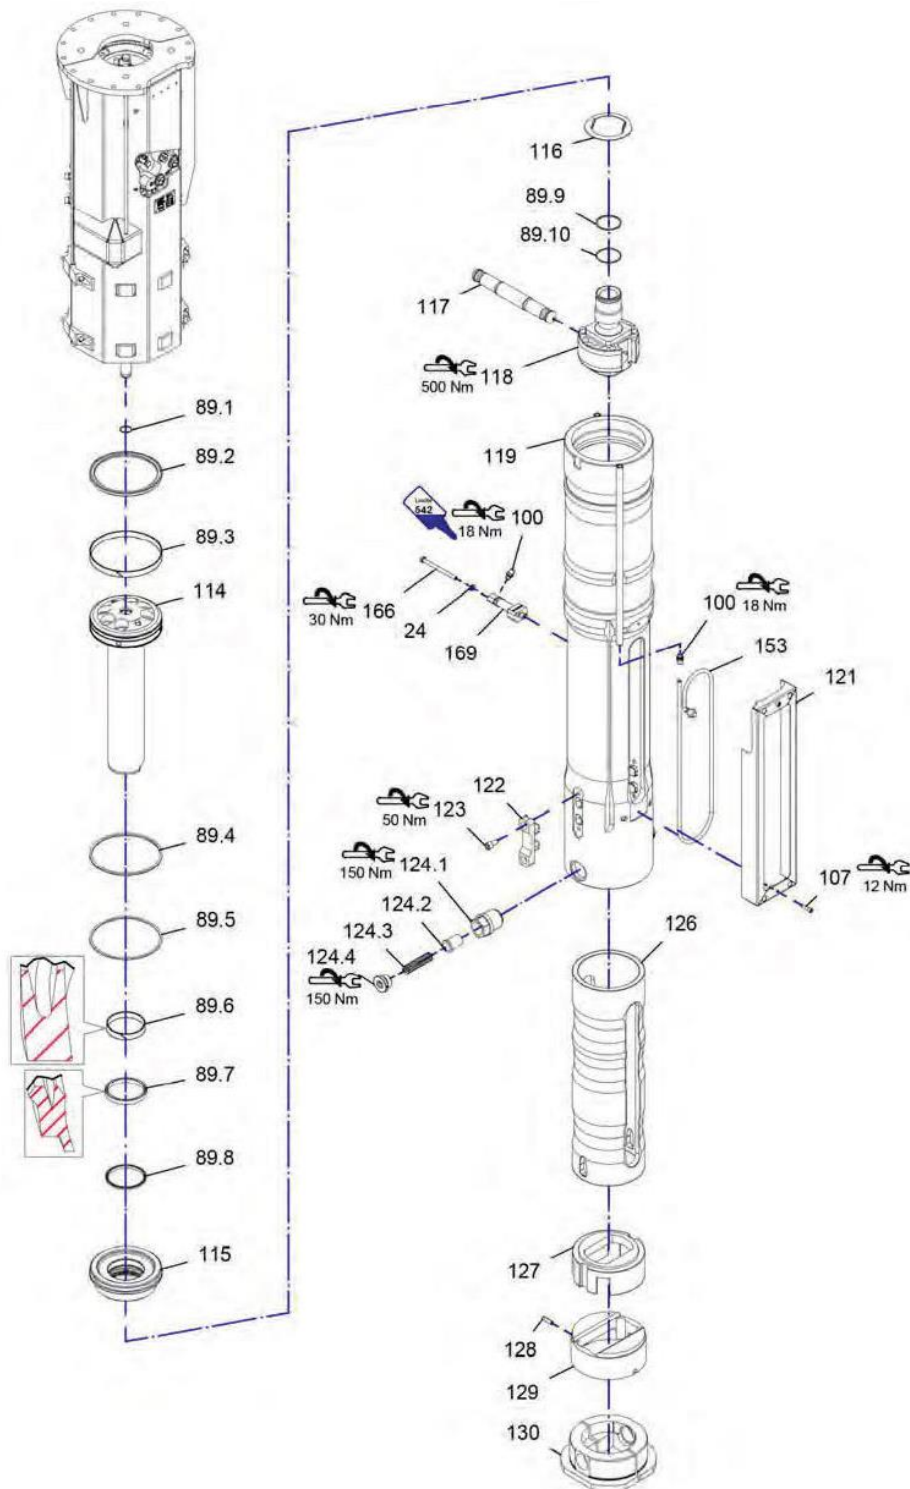

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-6

Page | 17

Page | 17


Ref.	Description	Part No.	Qty.	Spec.	Torque
126	Support Tube	3390 2033 00	1		
127	Upper Wear Ring	3390 2040 00	1		
128	Roll Pin	3391 5105 00	1	8 X 28	
129	Lower Wear Ring	3390 2038 00	1		
130	Cover	3390 2037 00	2		
153	Grease Hose	3391 5129 00	2		
166	Grease Adapter Bolt	3390 0687 00	4		
169	Grease Adapter	3390 2001 10	2		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-7: Exploded Assembly for Upper Cylinder

Page | 18

Page | 18

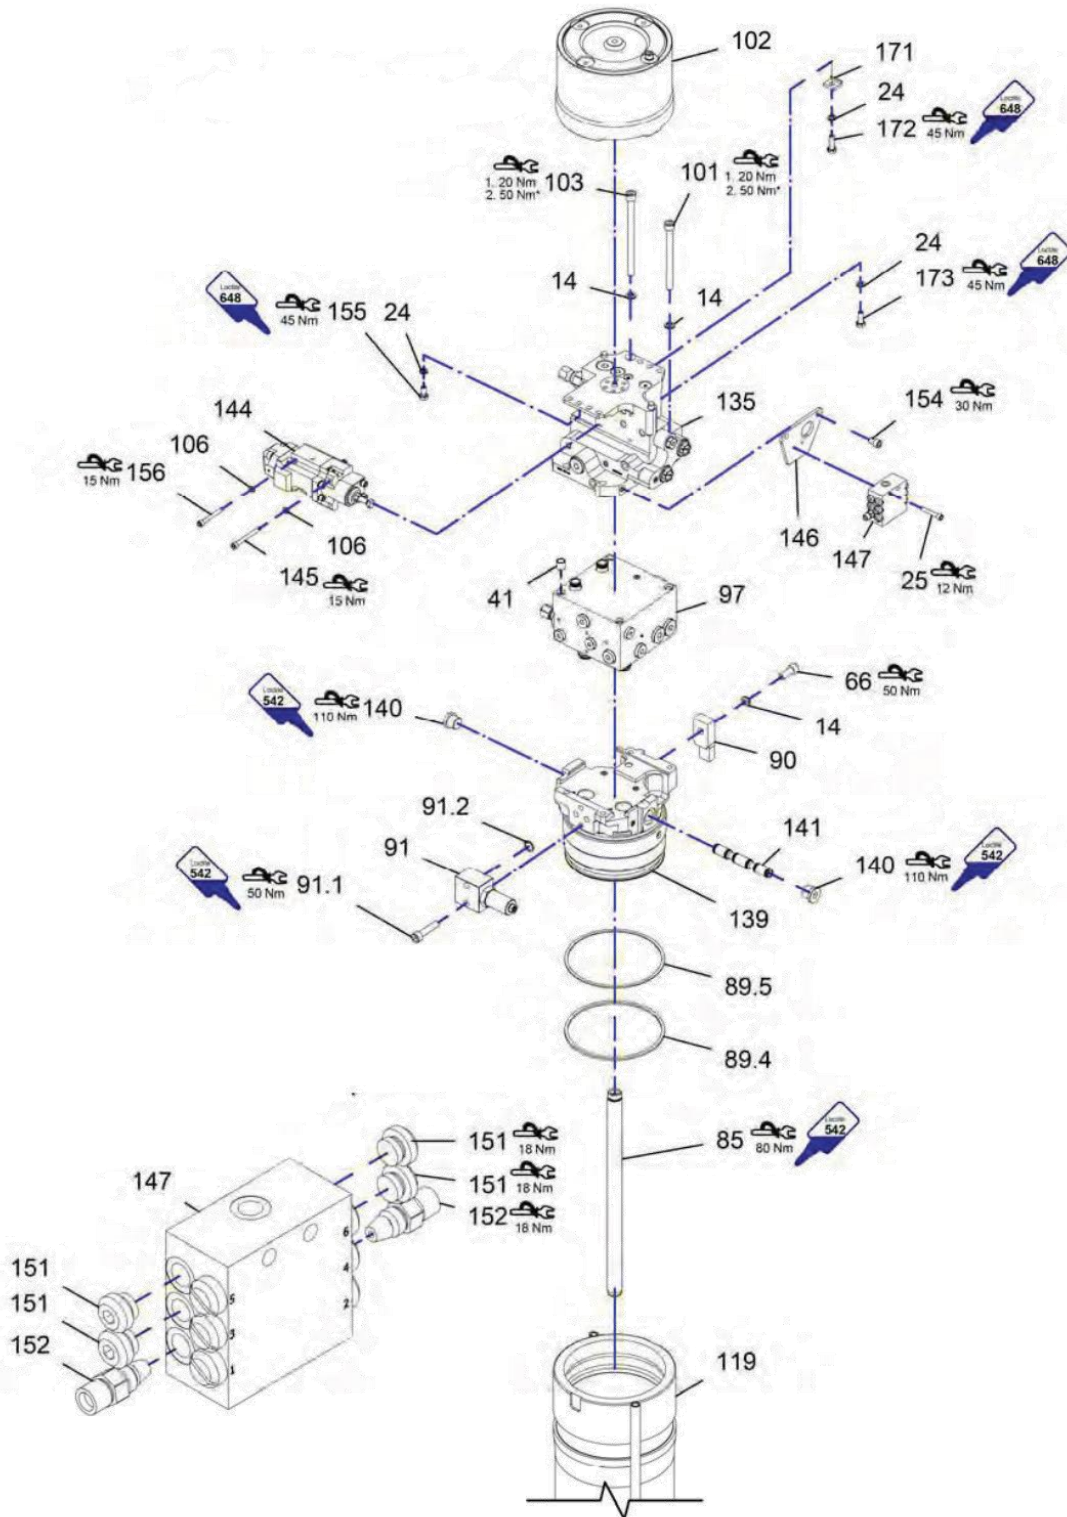

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-7

Page | 19

Page | 19


Ref.	Description	Part No.	Qty.	Spec.	Torque
14	Washer	3390 0568 10	5	Nordlock M10	
24	Washer	3390 0676 00	8	Nordlock M8	
25	Screw	3391 5093 00	2	M6 X 35 -8.8	8 ftlbs
41	Bushing	6420 0209 00	3		
66	Screw	3391 0081 00	1	M10 X 25 -8.8	37 ftlbs
85	Piston Tube	3390 2030 00	1		
89	Seal Kit	3390 2060 80	1		
89.1	O-Ring				
89.2	Piston Seal				
89.3	Guide Ring				
89.4	O-Ring				
89.5	Support Ring				
89.6	Guide Ring				
89.7	Rod Sealing				
89.8	Wiper				
89.9	O-Ring				
89.10	Support Ring				
90	Locking Plate	3390 2024 00	1		
91	Pressure Regulator	6430 0215 80			
91.1	Screw	3390 0514 00	2	M10 X 45 -8.8	37 ftlbs
91.2	O-Ring	6100 0115 00	2		
97	Booster Unit	3390 2059 80	1		
101	Screw	3391 5083 00	3	M10 X 120 -8.8	37 ftlbs
102	Grease Reservoir	3390 2058 80	1		
103	Screw	3391 5082 00	1	M10 X 150 -8.8	37 ftlbs
106	Washer	3391 5085 00	4	Nordlock M6	
119	Cylinder Tube	3390 2050 00	1		
135	Hydraulic Control Unit	3390 2057 80	1		
139	Cylinder Cap	3390 2029 00	1		
140	Screw Plug	6560 0226 00	2	VSTI 1/2"	81 ftlbs
141	Slider	3390 2020 00	1		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-7: Exploded Assembly for Upper Cylinder

Page | 20

Page | 20

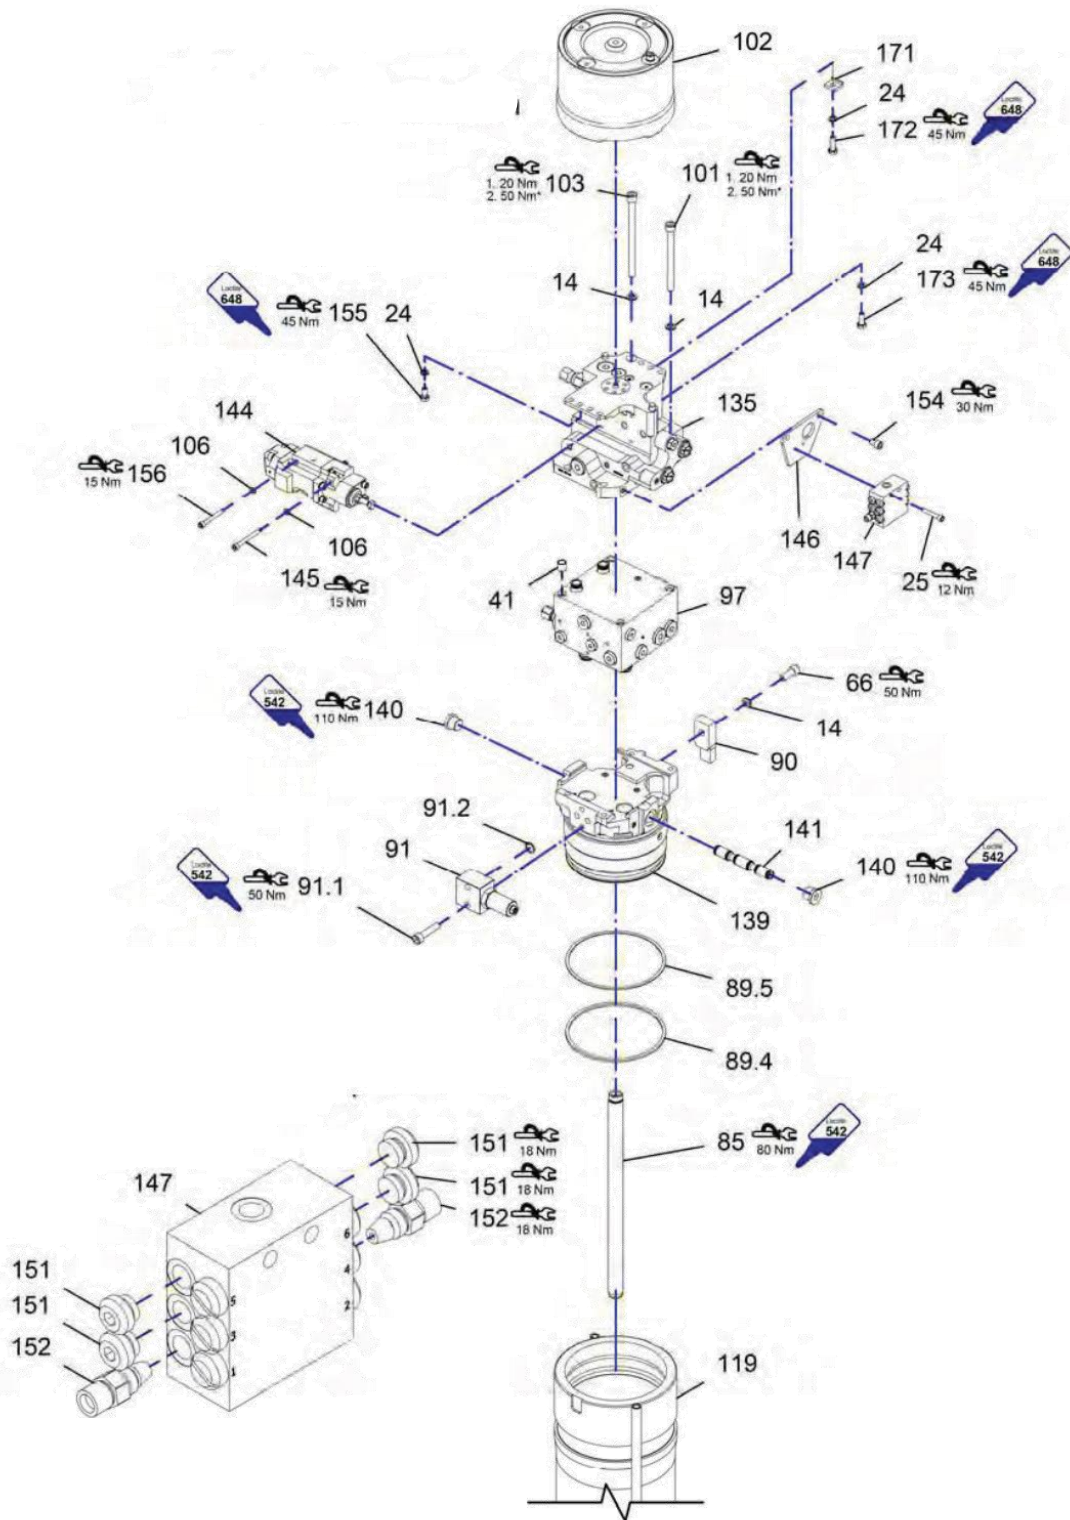

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-7

Page | 21

Page | 21


Ref.	Description	Part No.	Qty.	Spec.	Torque
144	Grease Pump	3390 2073 80	1		
145	Screw	3136 7062 12	2	M6 X 60 - 8.8	
146	Bracket	3390 2074 00	1		
147	Grease Manifold	3391 5124 00	1		
151	Plug	3391 5126 00	4		
152	Coupling	3391 5125 00	2		13 ftlbs
154	Screw	3390 0203 00	2	M8 X 12 -8.8	7 ftlbs
155	Screw	3390 0177 00	2	M6 X 50 -8.8	
171	Pad	3390 2085 00	1		
172	Screw	3391 5140 00	1		
173	Screw		3		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-8: Exploded Assembly for Upper Cylinder Exterior

Page | 22

Page | 22

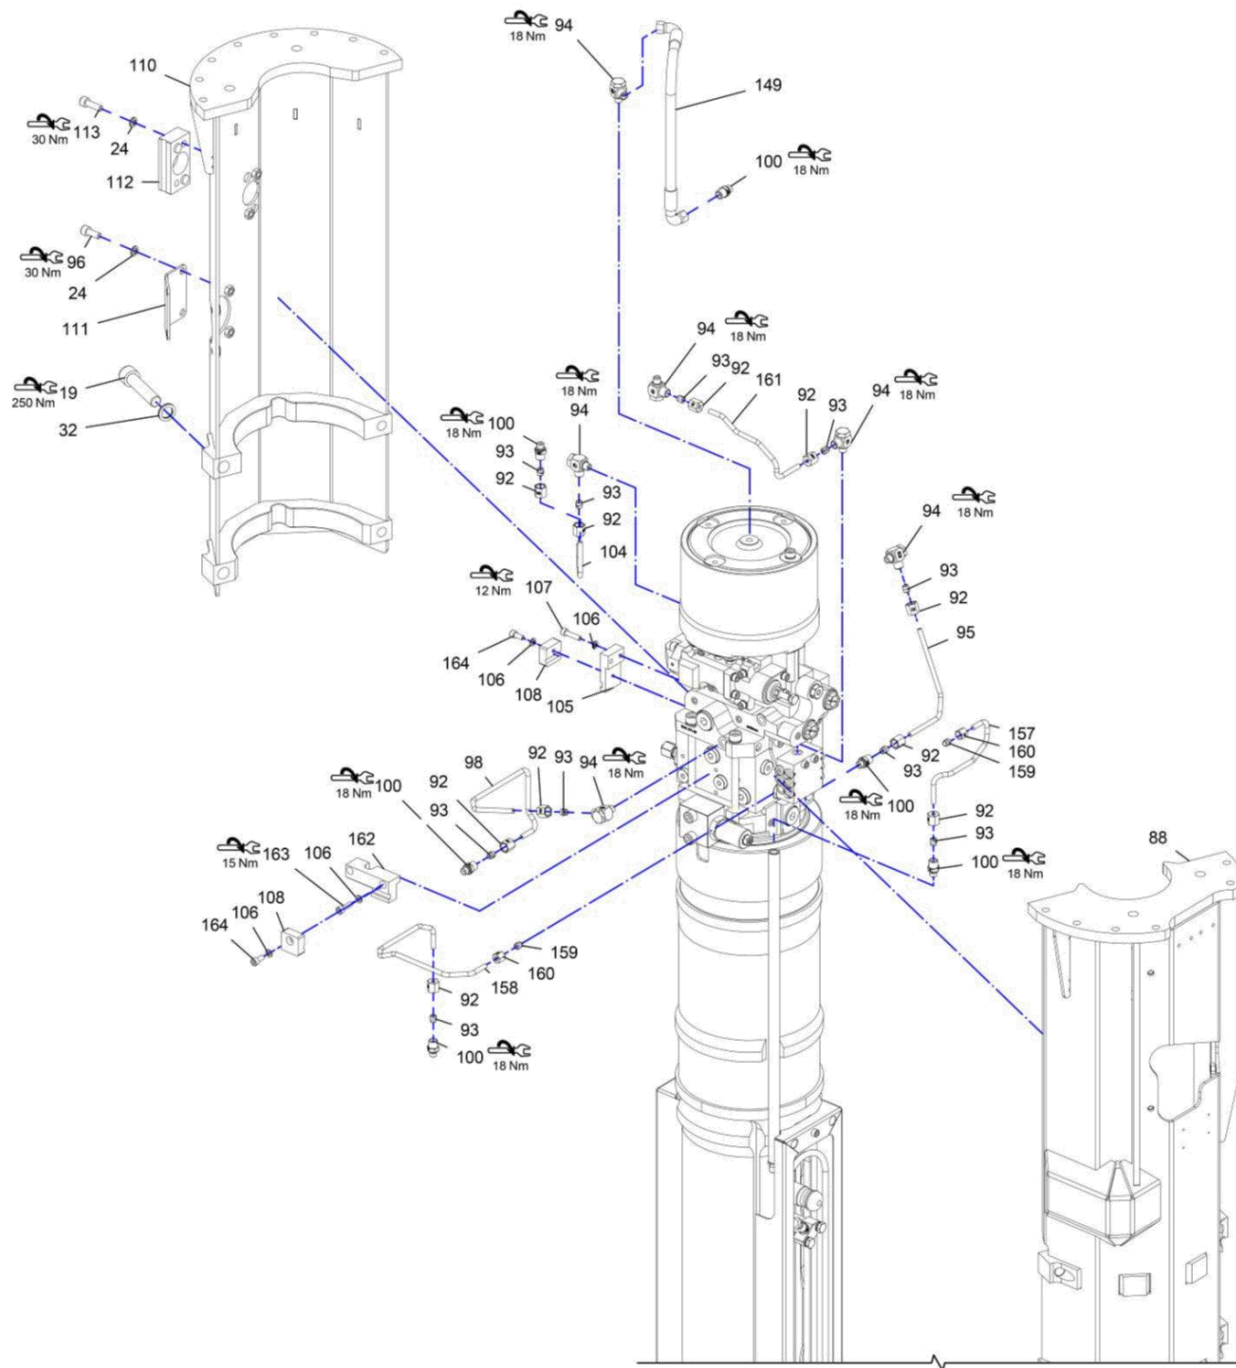

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-8

Page | 23

Page | 23


Ref.	Description	Part No.	Qty.	Spec.	Torque
19	Screw	6500 0778 00	4	M16 X 70 -8.8	185 ftlbs
24	Washer	3390 0676 00	6	Nordlock M8	
32	Washer	6560 0253 00	4	Nordlock M16	
88	Upper Cylinder Cover	3390 2042 00	1		
92	Coupling	3391 5079 00	10		
93	Ring	3391 5080 00	10		
94	Coupling	3391 5081 00	6	WH06LROMD	13 ftlbs
95	Pipe	3390 2022 00	1		
96	Screw	3391 0363 00	4	M8 X 20 -8.8	22 ftlbs
98	Pipe	3390 2023 00	1		
100	Coupling	3391 5077 00	6	GE06LREDOMD	13 ftlbs
104	Pipe	3390 2025 00	1		
105	Retainer Clamp	3390 2032 00	1		
106	Washer	3391 5085 00	6	Nordlock M6	
107	Screw	3391 0277 00	2	M6 X 25 -8.8	9 ftlbs
108	Pipe Bracket	3391 5084 00	2		
110	Upper Cylinder Cover	3390 2046 00	1		
111	Cover Plate	3390 2052 00	1		
112	Cover Block	3390 2053 00	1		
113	Screw	3391 0088 00	2	M8 X 25 -8.8	22 ftlbs
149	Hose	3390 2063 00	1		
157	Pipe	3390 2070 00	1		
158	Pipe	3390 2063 00	1		
159	Ring	3391 5133 00	2		
160	Union Nut	3391 5134 00	2		
161	Pipe	3390 2067 00	1		
162	Retainer Clamp	3390 2083 00	1		
163	Screw	3390 0195 01	2	M6 X 20 -8.8	
164	Screw	3391 5135 00	2		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-9: Exploded Assembly for Booster Unit (Limited)

Page | 24

Page | 24

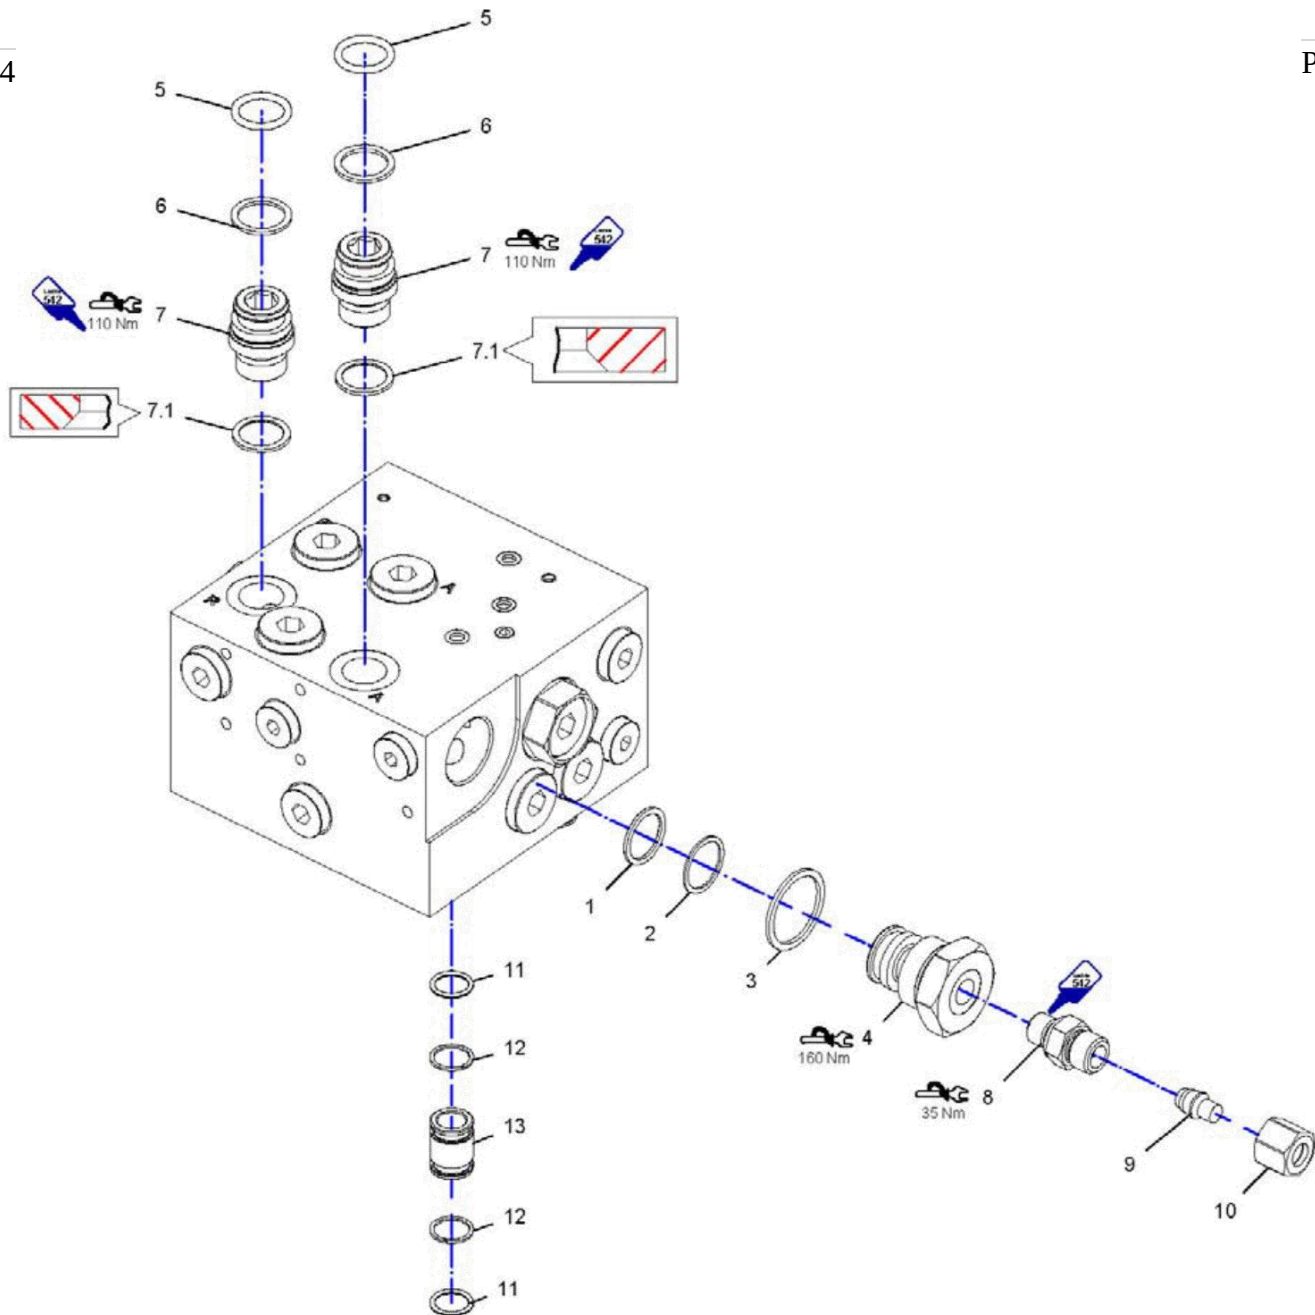

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-9

Page | 25

Page | 25


Ref.	Description	Part No.	Qty.	Spec.	Torque
	Booster Unit	3390 2059 80	1		
1	O-Ring	6560 0233 00	1		
2	Support Ring	6560 0235 00	1		
3	Copper Washer	6560 0219 00	1		
4	Screw Plug	3390 2009 00	1		118 ftlbs
5	O-Ring	0663 2125 00	2		
6	Support Ring	3390 2021 00	2		
7	Coupling, Complete	3390 2031 00	2		81 ftlbs
7.1	Seal Ring	3391 5074 00	1		
8	Coupling	3390 0192 00	1	GE08SREDA3CX	26 ftlbs
9	Plug	3391 0071 00	1	VKA08A3CX	
10	Nut	3390 0152 02	1	FM08SA3CX	
11	O-Ring	6420 0221 00	4		
12	Support Ring	6420 0223 00	4		
13	Coupling	6420 0208 00	2		

STOP!

For reasons of safety, liability, and functionality, the further disassembly or attempted repairs of the booster unit are not allowed. Disassembly will void any warranties and may lead to catastrophic failure of the unit and/or carrier.

DO NOT DISASSEMBLE BOOSTER UNIT.

Figure 1-10: Exploded Assembly for Hydraulic Control Unit (Limited)

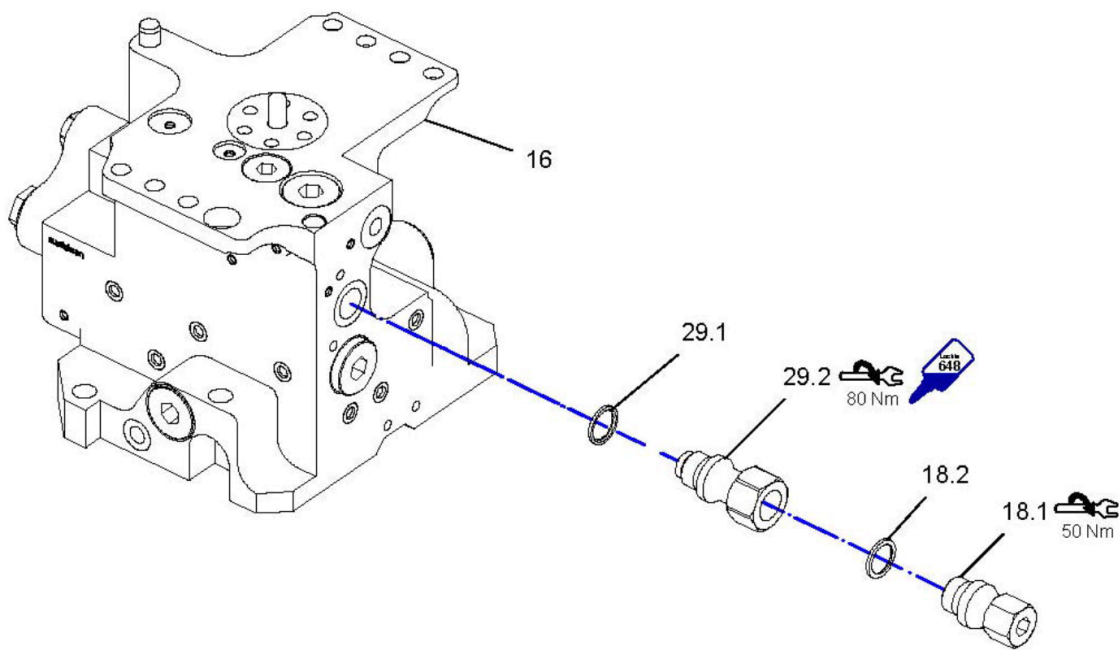

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-10

Page | 27

Page | 27


Ref.	Description	Part No.	Qty.	Spec.	Torque
	Hydraulic Control Unit	3390 2057 80	1		
16	Hydraulic Control Unit		1		
18	Screw Plug	3390 2055 00	1		
18.1	Coupling		1		
18.2	Seal Ring	3391 5087 00	1		
29	Coupling	3390 2069 00	1		
29.1	Seal Ring	3391 5087 00	1		
29.2	Coupling		1		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-11: Exploded Assembly for Grease Reservoir

Page | 28

Page | 28

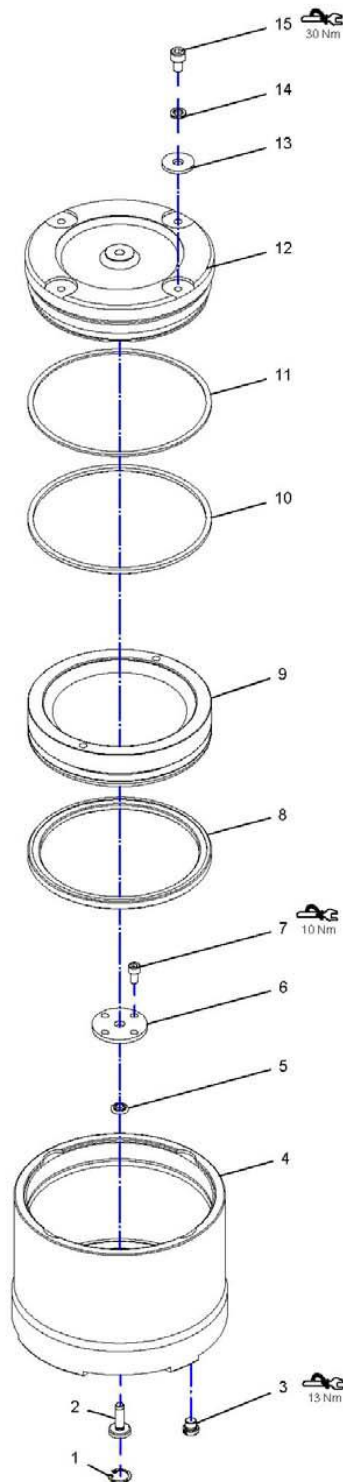

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-11

Page | 29

Page | 29


Ref.	Description	Part No.	Qty.	Spec.	Torque
	Grease Reservoir	3390 2058 80	1		
1	Lock Ring	6420 0753 00	1	19 X 1	
2	Slider	3390 2012 00	1		
3	Screw Plug	6560 0223 00	1	VSTI 1/8"	10 ftlbs
4	Container	3390 2010 00	1		
5	Rod Sealing	3390 2026 00	1		
6	Washer	3390 2051 00	1		
7	Screw	6100 0125 00	4	M6 X 12 -8.8	7 ftlbs
8	Piston Sealing	3391 5145 00	1		
9	Piston Sealing	3390 2009 00	1		
10	O-Ring	3391 5045 00	1		
11	Support Ring	3391 5046 00	1		
12	Cover	3390 2013 00	1		
13	Washer	3391 5078 00	1	ST 8 -100HV	
14	Washer	3390 0676 00	1	Nordlock M8	
15	Screw	3390 0203 00	1	M8 X 12 -8.8	22 ftlbs

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-12: Exploded Assembly for Grease Pump

Page | 30

Page | 30

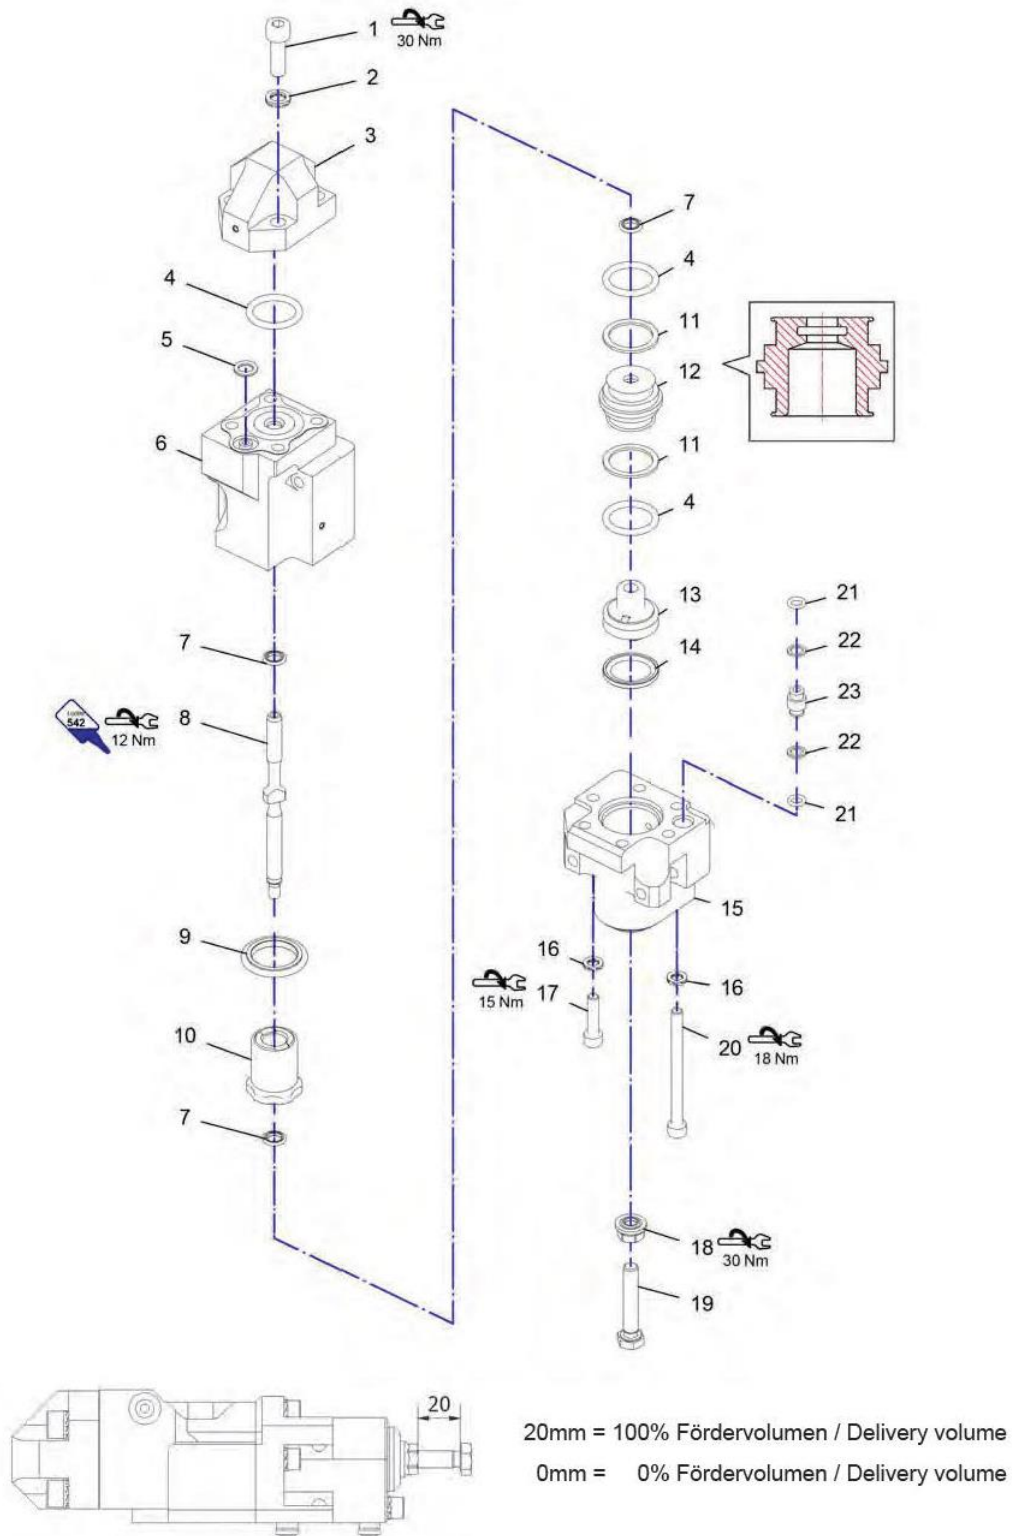

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY


Spare Parts List for Figure 1-12

Page | 31

Page | 31

Ref.	Description	Part No.	Qty.	Spec.	Torque
	Grease Pump	3390 2073 80			
1	Screw	3391 0088 00	4	M8 X X5 -8.8	22 ftlbs
2	Washer	3390 0676 00	4	Nordlock M8	
3	End Cover	3390 2077 00	1		
4	O-Ring	3136 7033 80	3		
5	O-Ring	3390 0130 00	1		
6	Housing	3390 2090 00	1		
7	Rod Seal	3390 2072 00	3		
8	Piston Rod	3390 2090 00	1		
9	Piston Seal	3391 5120 00	1		
10	Lubricant Piston	3390 2079 00	1		
11	Support Ring	3391 5119 00	2		
12	Centering	3390 2078 00	1		
13	Piston	3390 2076 00	1		
14	Piston Seal	3391 5121 00	1		
15	Housing	3390 2081 00	1		
16	Lock Washer	3391 5076 00	1	Nordlock M6	
17	Screw	3391 5122 00	1	M6 X 25 -8.8	11 ftlbs
18	Seal Nut	3391 5076 00	1		22 ftlbs
19	Screw	3391 5122 00	1	M8 X 45 -8.8	
20	Screw	3390 0519 00	2	M6 X 75 -8.8	9 ftlbs
21	O-Ring	3390 0682 00	8		
22	Support Ring	3390 0683 00	8		
23	Coupling	3390 2075 00	4		

Figure 1-13: Exploded Assembly for Grease Filling Adapter

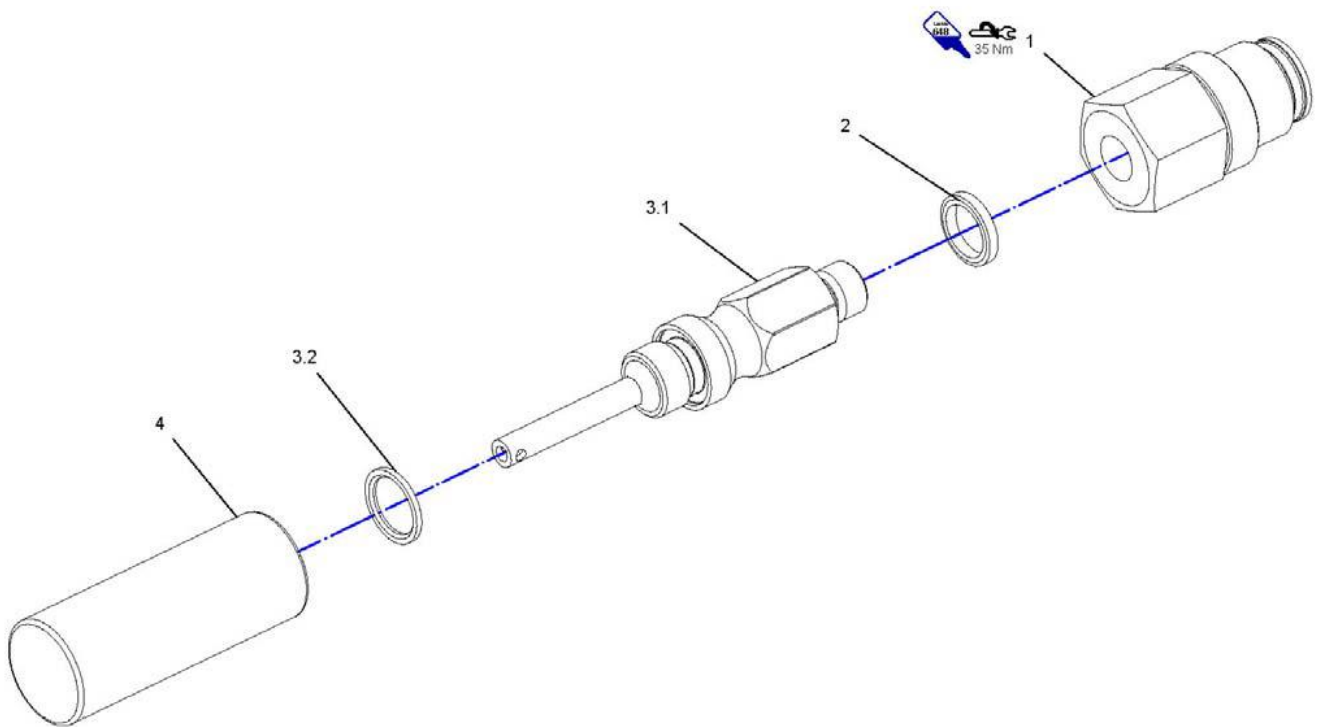

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-13

Page | 33

Page | 33


Ref.	Description	Part No.	Qty.	Spec.	Torque
	Grease Filling Adapter	3390 2041 80	1		
1	Screw Coupling	3136 7041 34	1		25 ftlbs
2	Seal Ring	3391 5087 00	1		
3	Adapter, Complete	3390 2041 10	1		
3.1	Adapter, Complete		2		
3.2	Seal Ring	3391 5087 00	1		
4	Protective Sleeve	3390 2004 00	1		

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Figure 1-14: Exploded Assembly for Grease Transfer Pump

Page | 34

Page | 34

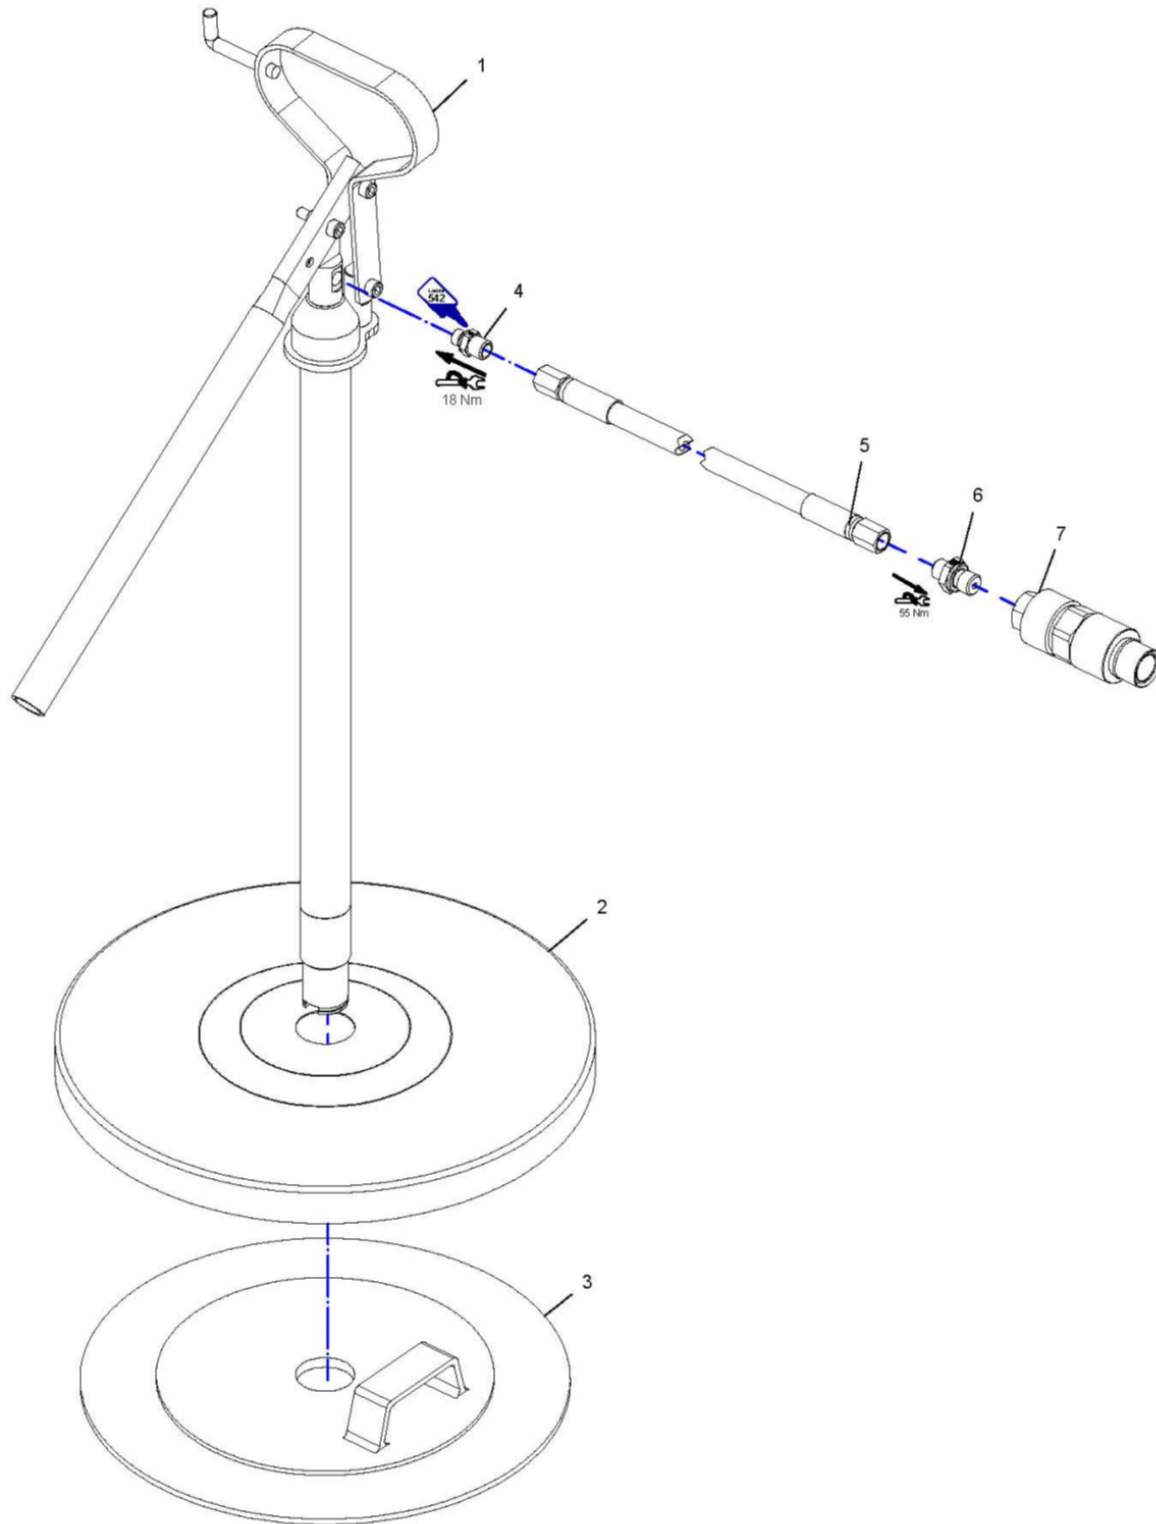

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Spare Parts List for Figure 1-13





Page | 35

Page | 35

Ref.	Description	Part No.	Qty.	Spec.	Torque
	Grease Transfer Pump	3390 2904 00	1		
1	Pump	3390 2904 01	1		
2	Dust Cover	3390 2904 02	1		
3	Lubricant Follower Piston	3390 2904 03	1		
4	Coupling	3391 5077 00	1	GE06LREDOMD	
5	Hose	3390 2905 00	1		
6	Coupling	3391 5103 00	1	GE06LR1/4EDOMD	
7	Screw Coupling	3136 7041 33	1	R1/4"	

C20 SPARE PARTS LIST AND EXPLODED ASSEMBLY

Additional Spare Parts and Accessories

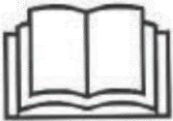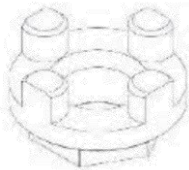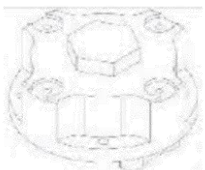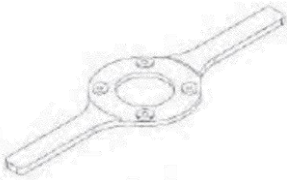Tools	Spec.	Part No.	Comments
		6000 0531 00	Complete C20 Consumer Guide
		3391 0980 20	Net 40 Pounds C20 Splitting Grease
	Assembly Tool	3390 2901 00	Pin Spanner, Small
	Assembly Tool	3390 2902 00	Pin Spanner, Large
	Assembly Tool	3390 2903 00	Mounting Spanner
	Miscellaneous and Specialty Components	Call Elco International for Information & Part Numbers	Hoses, hose protectors, fittings, slings, hole sleeves, parts not listed in above exploded assembly